

Getting Started

1. Insert the SIM card.
2. Remove battery cover.



3. Install the battery.

4. Attach the battery compartment cover.



5. Charge the battery.



6. Attach the antenna.

9500 PORTABLE QUICK REFERENCE

Quick Access Menu

Available from satellite mode only.

- 1 Find Name
- 2-**☺** Check Signal
- 3-**☺** Call Voicemail
- 4-**☺** Show Battery Meter
- 5-**☺** Lock Phone Now
- 6-**☺** Turn Vibrate Alert On/Off
- 7-**☺** Read Messages
- 8-**☺** Register Now
- 9-**☺** Forwarding On/Off

Phone Book

Add a number to the phone book:

1. Enter the phone number and then press **☺**.
2. Press **☺** to scroll to the desired memory type and then press **☺**.
3. Press **☺** to accept the number.
4. Enter a name, using **2-☺-9-☺** keys to enter letters and **☺** to scroll between letters. Press **2-☺-9-☺** as many times as necessary to reach desired letter. When name is complete, press **☺**.
5. Enter a three-digit location number, and then press **☺** or Press **☺** to store the entry in the next empty memory location.

Recall a number from the phone book:

1. Press **☺**.
2. Enter the three-digit location number of the entry, and then press **☺**.
3. Press **☺** to call the displayed entry.

Recall last ten numbers dialed:

1. Press **☺** until you see Phone Book, and then press **☺**.
2. Press **☺** to scroll to Last Ten Calls, and then press **☺** to select.
3. Press **☺** to scroll to Last Calls Made and then press **☺** to select.
4. Press **☺** to scroll to the number you are looking for.
5. Press **☺** to place a call to that number.

Basic Operation

Turn the phone's power on/off:

Press and hold **☺**.

Place a call:

Extend and rotate the antenna, enter the phone number, and then press **☺**.



Answer a call:

Extend and rotate the antenna, open the keypad cover, and then press **☺**.

End a call:

Press **☺** or close the keypad cover.

Special Features

Adjust earpiece volume:

Press upper and lower volume keys on the side of the phone.

Adjust ringer volume:

Press **☺** and then the upper and lower volume keys on the side of the phone.

Clear the last digit in the display or exit a submenu:

Press **☺**.

Clear the entire display or exit the menu system:

Press and hold **☺**.

Unlock the phone:

Enter your 4-digit unlock code (supplied to you by your service provider).

Display your phone number:

Press **☺** **☺**.